

Montagehandleiding / Instructions de montage
 Montagehinweis / Mounting instructions



OPTIE_OPTION
 VENTIELEN_VANNES_VENTILE_VALVES



+



code 5090.1119

code 5090.1125

code 5090.1126




* Niet mogelijk met ventiel 5094.402
 * Pas possible avec vanne 5094.402
 * Nicht möglich mit Ventil 5094.402
 * Not possible with valve 5094.402



+



AFMETINGEN_DIMENSIONS_ABMESSUNGEN_DIMENSIONS

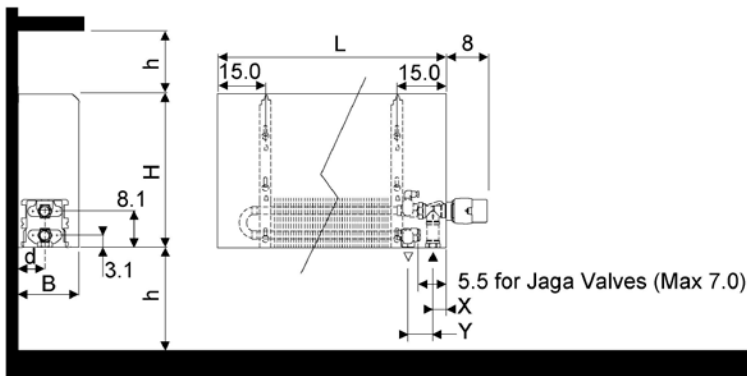

DIMENSIONS in cm			
Type	B	d	h min*
10-11	11.9	5.2	10
15-16	16.9	7.7	12

Code	X	Y
5094.414	1.2	3.8
5094.402	2.7	5
5090.405	2.7	5
5090.402	2.7	5
5090.407	2.7	5
5090.13001	2.2	5.5

- * Kleinere afstanden kunnen een lichte daling van de afgifte tot gevolg hebben.
- * Des dimensions inférieures peuvent diminuer légèrement l'émission de chaleur.
- * Kleinere Abstände verändern geringfügig die Wärmeleistung.
- * Smaller dimensions can decrease output.

